USER OPERATING INSTRUCTIONS
For 4 Wheel Combination Lock
A199, A141 and A142

General Information

1. Please read these instructions carefully before first use.
2. Do not expose lock to environmental influences (moisture, fire, dust, etc)!
3. Do not expose lock to vibrations and avoid dropping!
4. Clean lock with a damp cloth. Do not use chemical products!
5. Lock operable within a temperature range from 0°C to 50°C (32°F to 120°F).
6. Not suitable for 3-point cams. Only use 1-point cams!

Safety Instructions

1. On delivery the combination lock is factory set at **3 3 3 3**
For safety reasons set the lock immediately to your own personal code. Do not use any readily identifiable code (e.g. year of birth or 1234 etc.).
2. While setting the code hold the button during the whole procedure. Release only after code wheels have been set to the chosen code.
3. ***Never leave the code wheels set on your own personal code.***
4. For code setting and emergency opening via service key the lock must be horizontal in the index position.
5. To open the lock, enter your personal code and scramble code immediately after opening.
6. To close the lock, code wheels must be set to your own personal code to ensure a safe locking.
7. If code has been scrambled in the open position turn dial to engage drive once personal code has been selected.
8. Scramble code immediately after closing.
9. In case of lost code the lock can be opened via service key. Please contact the supervisor to reset the lock to the factory setting.

Personal code setting

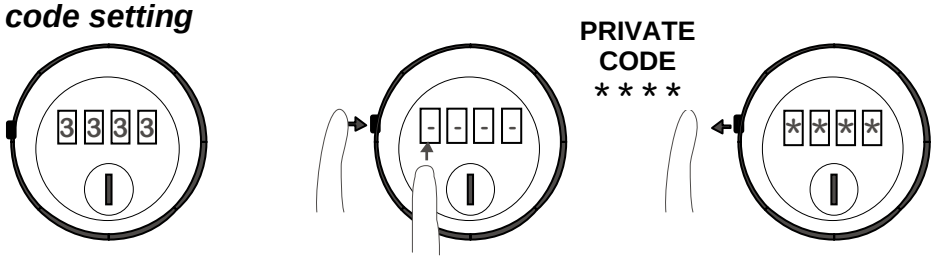

Lock operation

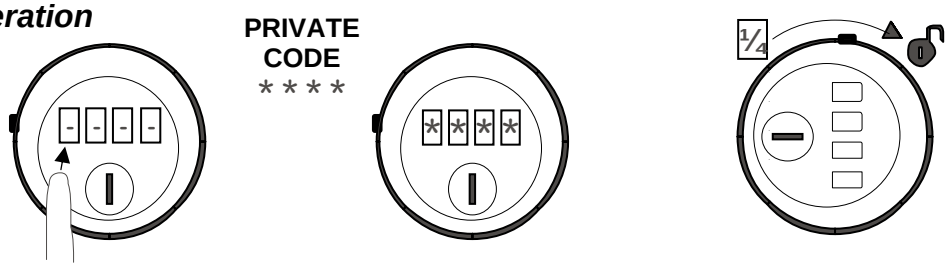

Further copies of these operating instructions can be downloaded from our website at www.euro-locks.org